



How to wall mount your IP business phone

Step 1. Drill two holes on the wall to match corresponding target holes.

Step 2. Place screws in the wall.

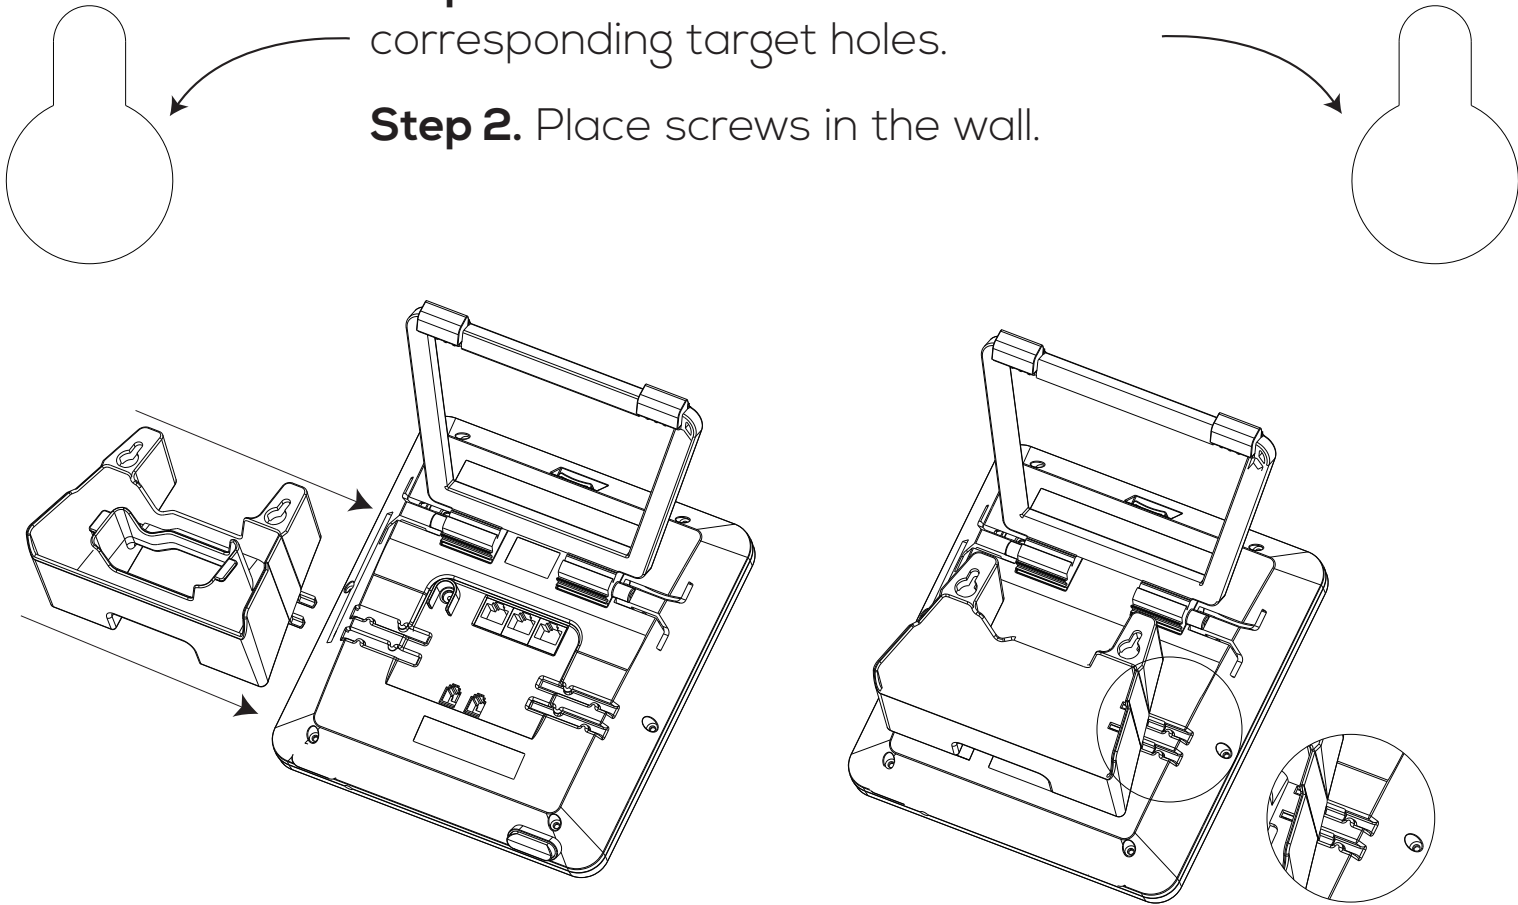

Step 3. Slide IP wall mount into base slot.

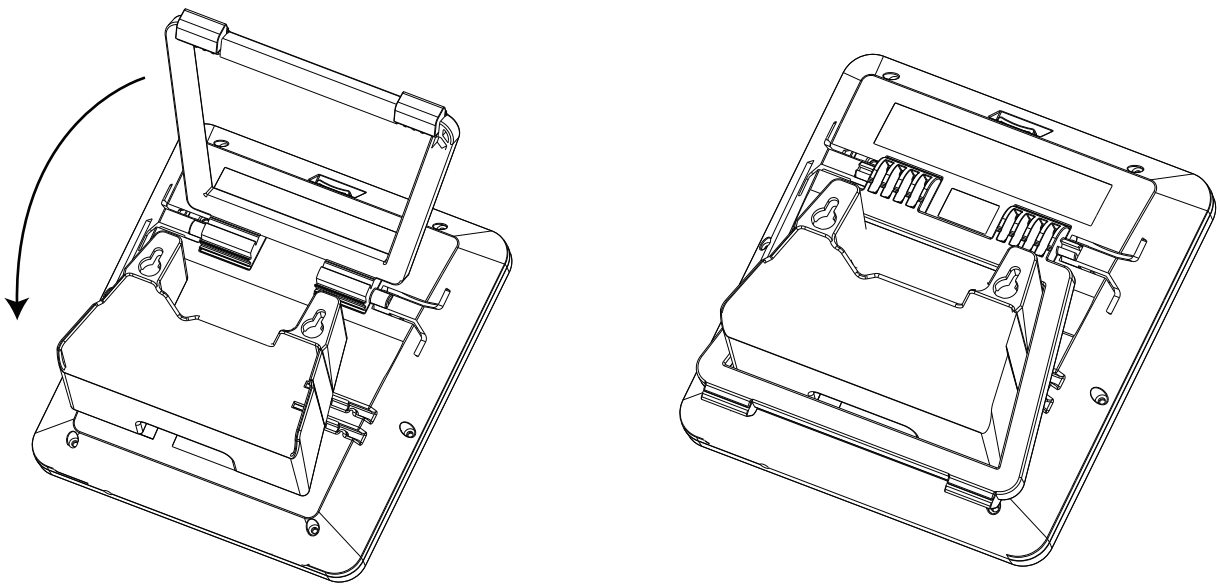

Step 4. Place the stand in the down position and hang the phone on the wall.